 


Ascent Adjustable Base Repackaging Instructions

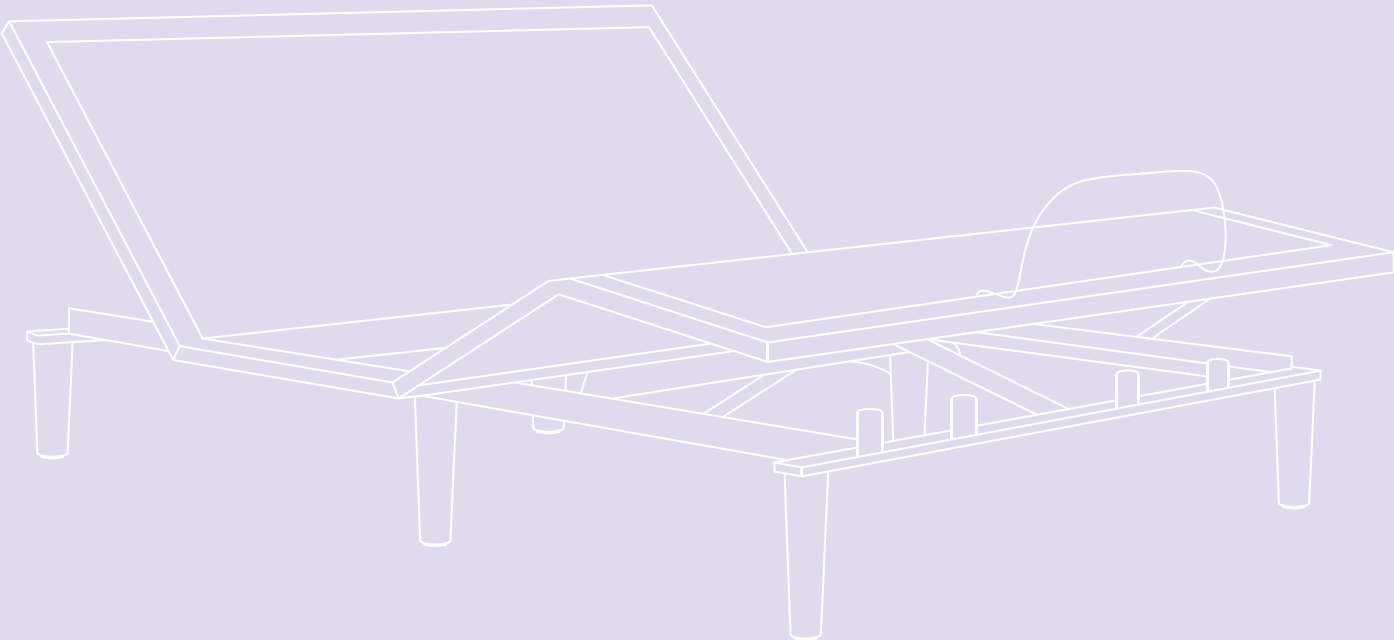

Follow the instructions below to take apart and repackage your Ascent Adjustable Base. Just like during assembly, you will need another adult to help you with this process.

REPACKING CHECKLIST: FIRST, GATHER THE FOLLOWING

- Another adult to help
- Allen wrench (only needed to remove headboard brackets)
- Packaging tape
- Box wrenches (only for King and Cal King sizes)
- Your original box
- Return shipping label (Emailed from a return agent)
- Return merchandise authorization slip (RMA - emailed from a return agent)
- Large paper, fabric, or plastic bags to contain smaller components

PARTS



Wireless Remote Control




Battery Backup Strap



Sync Cord



Connecting Strap

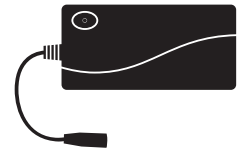

Power Supply



Power Cord



Legs




Nuts




Washers



Short Bolts

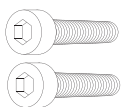


Long Bolts

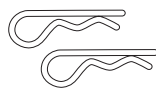

Clevis Pins



Cotter Pins

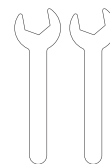

Box Wrench



Allen Wrench

REPACKING STEPS

1 Remove your mattress from the Ascent base.

- A Remove your mattress from the Ascent base.



2 Power down the base and make sure it's in a flat position.

- A Unplug the power cord from the wall.
- B Unplug the power cord from the supply box.
- C Unplug the power cord from the input cord (attached to the base).
- D Set aside.



 
3 Remove the mattress retaining bar.

- A Lift the bar up and press it forward.
- B Pull the retaining bar up out of the holes.
- C Set aside.



4 Remove the *headboard attachments.

- A Unscrew the headboard attachments located at the top of the base.
- B Place all attachment parts into a bag:

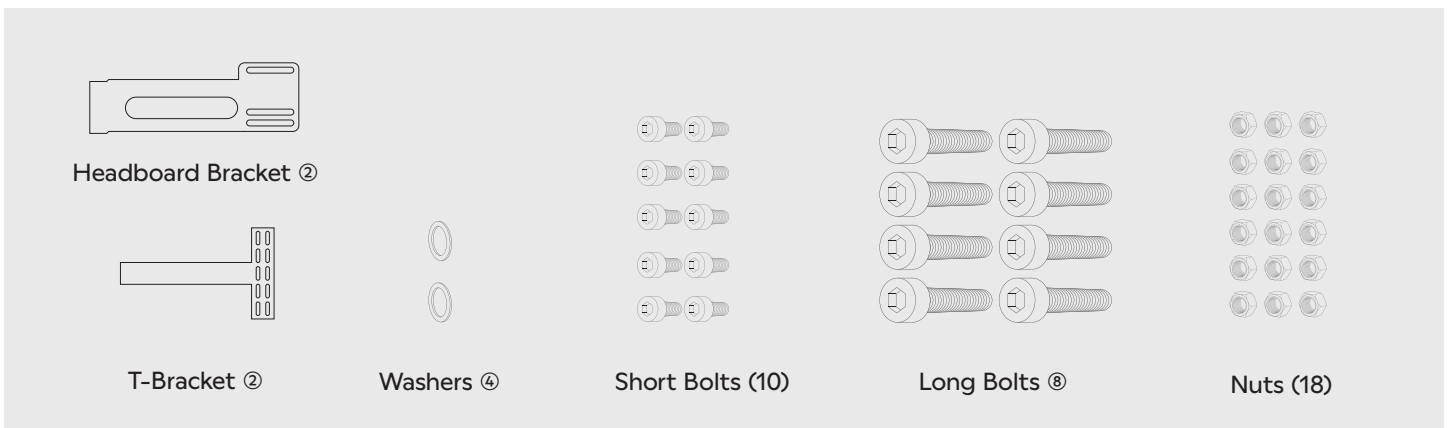

- C Set Aside. *You will only have headboard attachments if you purchased them at checkout.

5 Remove the legs.



- A With another person, flip the base on its back.
- B Unscrew the legs from the base.
- C Set aside.



KING/CAL KING ASCENT BASE

- Remove the 4 bolts to disconnect the two bed sections.
Unscrew the legs from the base.
- Remove the bottom section and fold it in half.
- Place all of the accessories below in bags:

- | | |
|---|-----------------------------|
| A | Wireless Remote Control (1) |
| B | Battery Backup Strap (1) |
| C | Power Supply (1) |
| D | Power Cord (1) |
| E | Legs (6) |
| F | Nuts (4) |
| G | Washers (4) |
| H | Short Bolts (2) |
| I | Long Bolts (2) |
| J | Clevis Pins (2) |
| K | Cotter Pins (2) |
| L | Box Wrench(2) |
| M | Allen Wrench (1) |

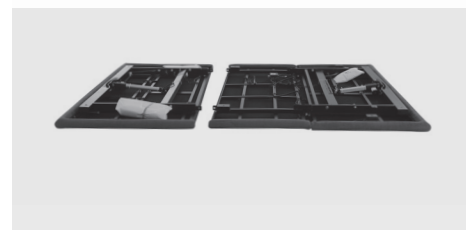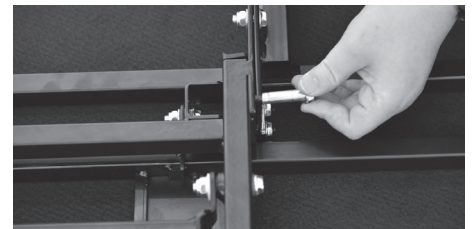

- Place the bag of accessories and the retaining bar on the top half of the base.
- Carefully fold the top half of the base. Do not smash the accessories.
- Place both parts of the base inside their corresponding boxes.

ALL OTHER ASCENT BASE SIZES

- | | |
|---|-----------------------------|
| A | Wireless Remote Control (1) |
| B | Battery Backup Strap (1) |
| C | Sync Cord (1)* |
| D | Connecting Strap (1)* |
| E | Power Supply (1) |
| F | Power Cord (1) |
| G | Legs (6) |

- Place the bag of accessories and the retaining bar on one half of the base.
- Carefully fold the base in half. Do not smash the accessories.
- Place the base in the box.

*Twin XL size only.

REPACKING STEPS CONTINUED

6 Tape the box and attach the shipping label.

- A Tape all around the box to seal it thoroughly.
- B Firmly tape one copy of the return shipping label and one copy of the RMA label to the outside of each box.

7 Drop off the box at your nearest FedEx location.

VISIT [PURPLE.COM](https://purple.com) FOR DETAILS AND
[PURPLE.COM/WARRANTY](https://purple.com/warranty) FOR
COMPLETE WARRANTY INFORMATION.

