



Owner's Manual Purple Premium Smart Base

Table of Contents

Safety Precautions and Usage Statements
Parts List
Base and Remote Overview
Quick Reference Guide
Installation Guide
Remote Control
Remote Control Pairing
Connecting Strap
Syncing Two Bases
Headboard Brackets
Emergency Battery Backup Strap
Troubleshooting
Notes

Safety Precautions and Usage Statements

Attention: Important Safety Disclaimers

Read the following information before using this product. Failure to use a surge protection device could compromise safety or cause product malfunction and could void the electrical portion of your warranty.

TO REDUCE THE RISK OF SHOCK, BURNS, FIRE OR INJURY:

For optimal safety and operation, plug bed base into a surge protector (not included). The bed base should only be plugged directly into a wall outlet or surge protector (strongly recommended). Always unplug the base from the electrical outlet before servicing any part of the base. To reduce risk of electric shock, unplug the base before cleaning. To safely disconnect, ensure the base is in a flat position with all motors off, and unplug from power source. Keep the power cord away from heated surfaces. Discontinue use of the bed base and contact a qualified service center if: it has a damaged cord or plug. if it is not working properly, or it has been dropped into water. Only use this bed base for its intended use as described in this manual. Do not use accessories/attachments that are not recommended by the manufacturer. Close supervision is required when the bed base is used by or near children, convalescents, disabled persons or pets. Improper connection of the equipment can result in the risk of electrical shock, electrical fire or faulty operation of this bed base. If the plug does not fit your outlet, contact a qualified electrician to install a suitable outlet. Unauthorized modification or failure to use a wall outlet or surge protector could void the electrical portion of your warranty.

SAFETY FEATURES:

<u>Manual operation</u> – If something gets caught in the platform when flattened, you can manually raise the platform up by lifting at both the head and foot to relieve pressure and allow for release.

<u>Emergency stop</u> – Stop the motion of the platform by pressing any button on the remote control.

<u>Power outage</u> – Use the "Emergency Battery Backup Strap" as a temporary power source to get the base to a desired position. Instructions on how to operate the Battery Backup Strap are on the Emergency Battery Backup page(s).

CHILDREN AND PETS:

Immediately dispose of all packing materials as it may pose a smothering risk to small children and pets. To avoid injury, it is not advised to allow children and small pets to play on or under the bed. Children should not operate the bed base without adult supervision.

PACEMAKERS:

Some products contain Neodymium MAGNETS which may interfere with devices such as pacemakers, ICD's and any other device sensitive to magnetic fields. It is STRONGLY recommended that owners of such medical devices consult their physician prior to using products that contain Neodymium MAGNETS. It is also possible that some pacemakers may falsely interpret the optional massage feature vibrations as movement/exercise. This is a common occurrence with any product that creates a vibrating movement and may affect the pacemaker. Please consult your physician before using the massage feature.

IN-HOME USE AND HOSPITAL STANDARDS:

Ergo adjustable bed bases are designed solely for in-home use. This base was not designed as a hospital bed and is not designed to meet hospital standards. Do not use this base with TENT TYPE oxygen therapy equipment or near explosive gases.

ADDITIONAL SAFETY FEATURES

Casters (optional leg accessory) are equipped with locking wheels to prevent unwanted movement. Even when locked and unable to roll, it is possible for the casters to slide. Free release head and foot motors are designed to lower the mattress by retracting only with gravity, never pulling downwards, which minimizes pinch points

LIFTING/LOWERING MECHANISMS

The lift/lower feature will emit a minimal humming sound during

Safety Precautions and Usage Statements

operation. This is normal. During operation, the lift arm wheels make contact with the platform support of the base. This contact may result in metal on metal or metal on plastic contact. This applies slight tension on the moving components and resonance is reduced to a minimum level. If excessive noise or vibration is experienced, reverse the movement action (up or down) of the base with the remote control. This should realign the base's activating mechanisms to the proper operational position. In normal base operation, the wheels, which allow the bed to maintain its distance from the wall, will make contact with the steel platform supports of the base creating a contact noise. When entering, exiting or shifting weight on the base, this contact noise may be audible as the wheels make contact. This is normal.

MATERIALS

Ergo adjustable bases are constructed from various materials including woods, metals, plastics and fabrics. Tension, pressure or movement applied to the frame, platform or shroud through general use may create an audible sound.

TOLERANCE

All Ergo adjustable foundations, depending on make and model. are designed and manufactured to perform and function within designated quality control parameters. Bases are subject to meticulous and rigorous inspections during the quality control process to ensure bases will operate within these standards during normal operating use. Normal operating use is defined as the following: Adjustable foundation is to be operated with a mattress and load. Testing procedures require lifetime cycle tests with up to 120kg distributed load. The angle (designated " α " in figure 1) between the back section and the flat section for various configurations of the mattress support platform shall be $\pm 3^{\circ}$, which translates to a tolerance of up to $1\frac{1}{2}$ ". The angle (designated " β " in figure 1) between the flat section and foot section for various configurations of the mattress support platform shall be \pm 3°, which translates to a tolerance of up to $\frac{3}{4}$ ". Any adjustable foundation deemed to be within these allocated tolerances is considered to have met the manufacturer's quality control standards.

THAT "NEW PRODUCT" SMELL:

Some people notice a slight odor to their new adjustable base—this can come from our material manufacturing process. This smell is normal and usually disappears before the product reaches you. Sometimes, however, this smell may still be noticeable. It usually disappears after a few weeks, providing adequate ventilation of the product and the environment.

BREAK IN PERIOD:

You can speed up the break-in period by simply spending time in the adjustable bed through activities such as reading, watching TV or playing with the kids or grandkids. The extra movement will help the adjustable base respond to weight and temperature changes. Some of the materials in our adjustable bases such as the woods, metals and plastics used in the platform, frame and components are sensitive

to moisture content and temperature and may make sounds in colder environments.

PAIRED OPERATION:

When operating a "paired" split base setup there may be a time latency up to 1.5 seconds between each bases articulation.

WEAR AND TEAR:

Wear and tear is damage that naturally and inevitably occurs as a result of normal use or aging.

FABRIC CARE:

To prolong the life of your fabric, protect from direct sunlight whenever possible. For spot cleaning, wipe area with a light damp sponge or vacuum with a soft brush attachment to remove particles. Keep at a minimum of 30cm (12 inches) away from direct heat sources. For a deeper cleaning, blot liquid spills with a clean dry cloth. Wipe with a clean cloth dampened with warm water. Do not wet excessively. A soft bristle brush may be used to remove ingrained soil. Avoid

Safety Precautions and Usage Statements

scratching by gentle brushing. Wipe with a clean cloth dampened with warm water to remove residues. Dry in shade away from direct heat. If persistent marks remain visible after cleaning, seek professional advice.

PRODUCT RATINGS:

The lift motors are not designed to operate continuously for more than [2] minutes in an [18] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty. The massage motors are not designed to operate continuously for more than 30 minutes at a time. Please allow the massaging system to rest for 30 minutes after automatic massage shut off before restarting.

WEIGHT LIMITS:

This product is not rated to support weights in excess of 750 pounds. The base will structurally support this weight, provided it is evenly distributed across the bed base. The adjustable base is not designed to support or lift this amount in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

SAVE THESE INSTRUCTIONS.

FCC Compliance:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Parts List

Before discarding the packing materials - ensure all the parts are accounted for.

All electronics and components that need to be installed are located in boxes under the base or attached to the frame.


- A) Wireless Remote Control ① & AAA Batteries ③
- B) Mattress Retainer Bar ①*
- C) Legs 6
- D) Power Cord ①
- E) Power Supply ①
- F) Sync Cord ‡
- G) Battery Backup Strap ①
 ② 9V Alkaline Batteries (not included)
- H) Connecting Strap‡
- I) Bluetooth Dongle


Misc Parts (not included):

Surge Protector


Headboard Bracket Components (Optional):

- J) Headboard Bracket 2⁺
- K) T-Bracket @†
- L) Long Bolts ®†
- M) Short Bolts 6+
- N) Wingnuts 2⁺
- O) Washers 2⁺
- P) Hex Key 1+
- * These items are attached to the base for shipping purposes. Carefully remove from base and set aside.
- ‡ Only included in Twin XL and Cal King Split bases.
- * This is an optional item and can be purchased.

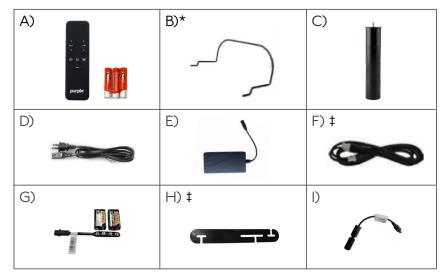

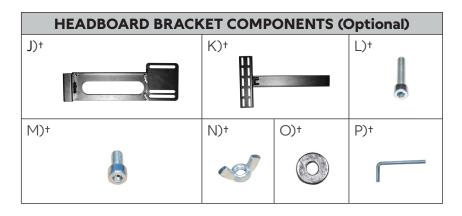


Base and Remote Overview

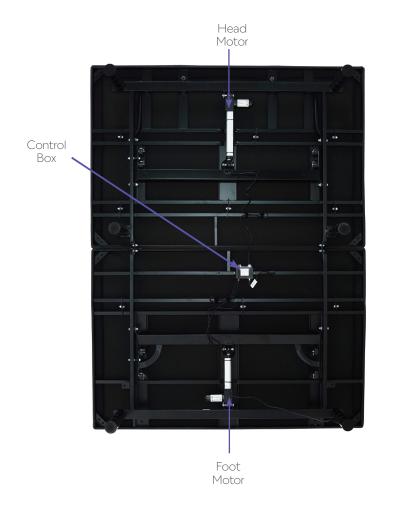



Quick Reference Guide

Not to scale. For illustration purposes only. Read all instructions before beginning installation.

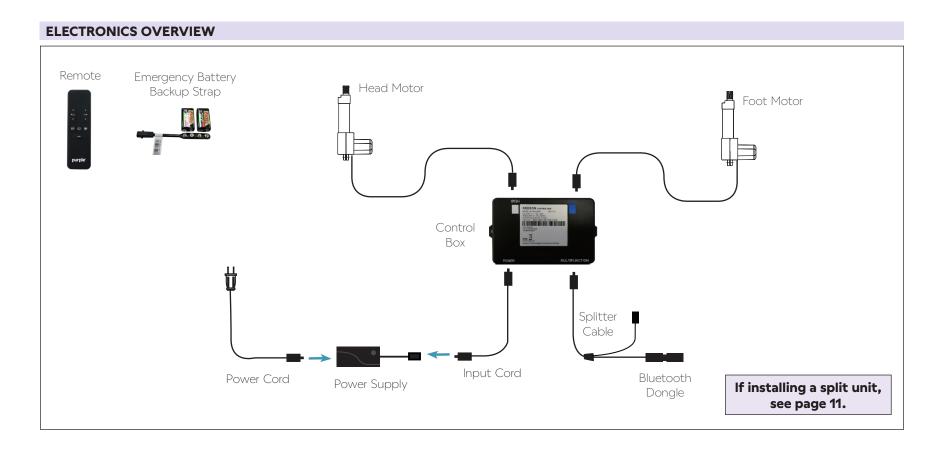

Installation Guide

Always use two people when setting up the base.

STEP 1

Place the bed base box in a desired location with the bottom of the box facing up.

Remove the binding straps and packing materials, making sure not to puncture the box with any sharp objects.

STEP 2

Flip the box over and remove the top of the box.

Next, remove the base from the box, unfold and keeping the bottom of the base upward.

STEP 4

Uncoil input Cord (connected to Control Box's Power port) and plug into Power Supply.

Locate the Backup Battery Strap and
 2 9 Volt alkaline batteries (not included). Store the strap and batteries in an accessible location in case of an emergency power outage.





STEP 3

To install the 6 legs, thread the bolt of the leg onto the threaded insert and tighten by hand. **Do not over tighten.** The stackable legs untwist into separate 3" sections for custom leg height options.

The base can be used without legs, resting flat on a platform bed frame. For your safety, ensure that your bed frame can support the weight of your base, mattress and sleeper(s).







To sync two bases see detailed installation instructions on page 11-12. Install sync cord prior to flipping the base over.

STEP 5

Uncoil the Power Cord and connect to the Power Supply. Place the Power Supply on the ground and extend from the base. Ensure that the Power Supply and all attached cords are directed toward the desired surge protector.



Installation Guide

STEP 6

Carefully flip the base over on to its legs. Important: Two people are required to move the bed base. Do not drag across the floor. Do not rest frame on its side, excessive pressure may damage the legs.

STEP 7

Plug the power cord into a power source. A surge protector is recommended.

STEP 8

Quickly test remote functions to verify proper setup before placing mattress on base. Return the base to a flat position before placing the mattress on top.

STEP 9

Install mattress retainer bars by inserting each end of the retainer bar into the holes at the foot of the platform.





To install Headboard Brackets, see instructions on page 13.

STEP 10

Download the app. Scan the QR code below or search in the App Store or Google Play for the Purple Smart Base app.




Setup is now complete!

For customer support, visit www.ergomotion.com or call: 1-888-550-3746

Remote Control

REMOTE OVERVIEW

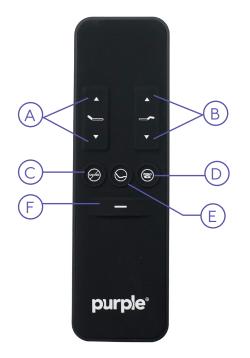

BUTTON FUNCTIONS

- A. The **<u>Head</u>** arrows lift and lower the head section of the base.
- B. The **<u>Foot</u>** arrows lift and lower the foot section of the base.
- C. The <u>Anti-snore</u> preset position* will elevate the head section slightly and may help reduce snoring.
- D. One Touch **Zero-G**[®] preset position adjusts your legs to a higher level than your heart, helping to relieve pressure off the lower back and promote circulation.
- E. The **Lounge** preset position* will adjust the head and foot section to a comfortable position ideal for reading or watching television.
- F. One touch **<u>Flat</u>** preset position lowers the base to a flat positon.

*Save a new preset position:


- 1. Articulate the head and foot to your desired position.
- 2. Press and hold one of the Memory Preset buttons (**Anti-snore** or **Lounge**) for 5 seconds. The remote backlighting will flash to indicate the position was successfully saved.
- 3. Note: To restore the preset buttons back to their original factory settings, hold **Flat** and **Zero-G**[®] simultaneously for at least 5 seconds. The original presets will be restored.

Remote Control Pairing

The original remote that comes in the box is already paired to the adjustable base. No further action is required. In the event that the remote is not paired with the base, follow the steps below.

STEP 1

Unplug the power cord from your power outlet. Wait one minute, then plug it back in to your power outlet. Perform Step 2 within 10 seconds, while the control box light is flashing.

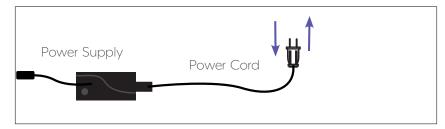

STEP 3

The remote is now paired to the adjustable base. Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again or call Ergomotion customer service: 1-888-550-3746

STEP 2


Remove the back cover on the remote. Press and hold the PAIR button on the back of the remote. The PAIR button will illuminate and start to flash. When the PAIR button stops flashing, the LED light on the control box will stop flashing. Release the PAIR button.



Syncing Two Bases (Split Base Set Up Only)

A Sync Cord is included only with Twin XL and Cal King Split bases.

The Sync Cord connects the two control boxes to a single remote for the synchronization of two bases. This process is most commonly used for syncing two connected TXL bases.

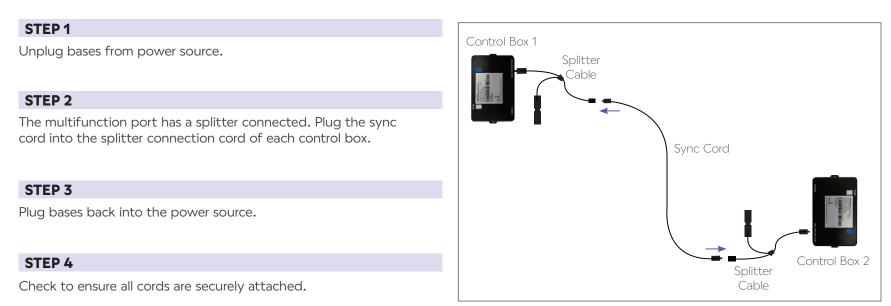

The system is now linked. Pressed buttons on either remote will control the two bases simultaneously.

PERFORMANCE NOTES

If bases become mismatched, returning the bases to the flat positions will re-sync the mechanical positions.

Connecting Strap (Split Base Set Up Only)

If any split setup is being installed, plastic connecting straps are provided (one per base) to secure the bases together. Use both straps to secure the head and foot portions together.

STEP 1

With the bases in their desired location, slightly loosen both legs to allow the strap to fit on the leg bolt, between the leg and frame.



STEP 3

Re-tighten legs. Do not over tighten. Use the remaining strap and repeat on other end of the base.

STEP 2

Slide side (a) of the connecting strap onto leg bolt. Swing the strap and connect side (b) to the leg bolt. Secure the strap by shifting to the left.



Headboard Bracket Installation Guide (Optional)

Headboard Brackets are an optional accessory and are not included.


See page 4 for headboard bracket installation parts list.

STEP 1

a. Align the hole in the bracket to the nut into which the leg threads. Hold the bracket in place and screw the leg into the base until it is snug. DO NOT OVERTIGHTEN. Too much force may cause the leg to spin freely.




b. Align the tab with the hole in the frame (located towards the foot of the base) and use a short bolt, washer and wingnut to secure the bracket. Make sure the bolt is tight.

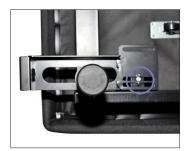

STEP 2

- a. Measure the distance between the mounting holes on the headboard and install the T-Bracket to accommodate the headboard.
- b. To install the T-Bracket, slide the T-Bracket through the end of the headboard bracket. Align the flat side of the T-Bracket plate to the mounting holes on the headboard.
- c. Secure T-Bracket in place by inserting two short screws through top of bracket. Use hex key to tighten screws.

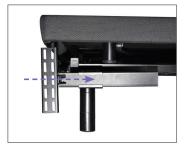



STEP 3

Connect your headboard to the attachment plate using the remaining long screws or hardware that came with your headboard. The heads of the bolts will face outward. Use hex key to tighten bolts.

Battery Backup Strap (Optional)

For emergency use only, in case of a power outage.

Batteries are not to be used for normal operation of the bed.

STEP 1


Disconnect the Power Supply from the input power cord.

STEP 3

Connect the end of the Battery Backup Strap to the input cord that is attached to the control box.

Input Cord

Control Box

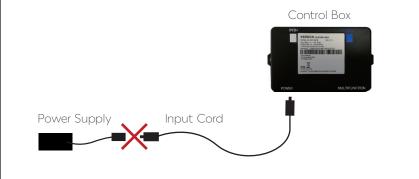

STEP 2

Connect the Battery Backup Strap to 2 Alkaline 9 Volt batteries. Do not mix brand name Batteries.



STEP 4

Battery Backup Strap

Use the remote to return the base to a flat position.

Note: Detach the Battery Backup Strap and reconnect the power supply after the emergency is over, as the system will continue to draw power from the batteries even if not in use.

Troubleshooting

If one or more functions on the bed base have stopped operating:

- Check under the bed base to verify that the wired connections are secure and that there are no cords or bedding obstructing the movement of the base.
- Check to ensure the blue light is illuminated on control box. If there is no light, verify that the input and power cords are properly connected.
- Unplug the base for 1 hour to reset the electronic components.
- Plug bed base into a different electrical outlet, or test current outlet with another working appliance (a grounded, electrical surge protector is recommended).
- Check that the remote control backlit turns on when any button is pressed. If there is no light, remove and replace full batteries in the remote control and re-pair the remote to the base (see page 10).

If issue is not resolved by following the instructions above, locate serial number on warranty card or back of remote and call

Ergomotion Customer Service: US 1-888-550-3746

Nationwide Customer Service

02023 Ergomotion Inc

V002_5/2023

Phone1.888.550.3746Fax1.805.979.9399Emailinfo@ergomotion.comWebwww.ergomotion.com

Serial Number:

+

+			+

 $^+$