


King/Cal King Installation Guide

Purple Adjustable Base



Scan QR code for a setup video demonstrating helpful hinge movements to correctly align the long bolts:

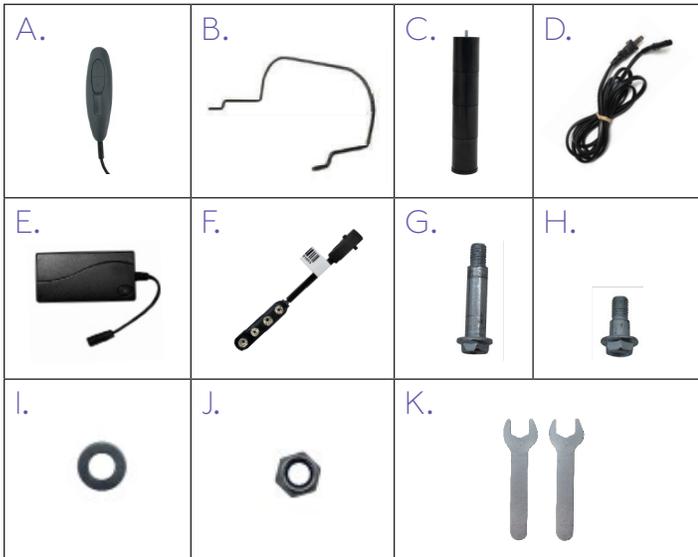

Part List

Before discarding the packing materials ensure all the parts are accounted for. Some parts may be attached to the base or inside boxes, please inspect carefully.

- A. Wired remote control
- B. Mattress retainer bar
- C. Legs ⑥
- D. Power Cord
- E. Power supply
- F. Battery backup strap
- G. Long bolts ②
- H. Short bolts ②
- I. Washers ④
- J. Nuts ④
- K. Open end wrenches ②

STEP 1 - Unfold base

Remove the bed base from the box and unfold keeping the bottom of the base* facing upwards.


Remove the binding straps and packing materials, making sure not to puncture the box with any sharp objects.



STEP 2 - Secure hinge with short bolt

Fig.A

Lift the frame slightly

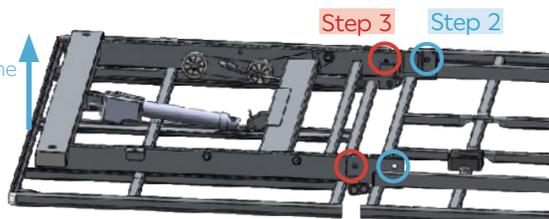

- a. Lift the frame slightly and insert a short bolt through the hole in the hinge of the frame. (Refer to the blue indicators in Fig.A)



- b. If the bolt holes are not aligning, there are two hinge movements that need to be adjusted. Adjust both directions while inserting the bolt to find alignment.



Tips for installing the bolt:

To help align the holes, insert a #2 screwdriver through them. Move the screwdriver around while adjusting the hinge to ensure everything lines up perfectly. Inserting packaging foam under one side of the frame can help lift.



- c. Secure the end of the short bolt with a washer and a nut.



- d. Finger-tighten the bolts first to allow for bolt alignment on both sides before tightening the bolts with the provided open end wrenches.




STEP 3 - Secure hinge with long bolt

- a. Lift the frame slightly and insert a long bolt through the hole in the middle of the hinge of the frame. (Refer to the red indicators in Fig.A)



- b. Secure the end of the long bolt with a washer and a nut.

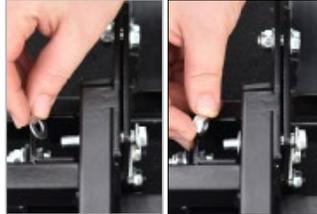

- c. If the bolt holes are not aligning, there are two hinge movements that need to be adjusted. Adjust both directions while inserting the bolt to find alignment.



Tips for installing the bolt:

To help align the holes, insert a #2 screwdriver through them. Move the screwdriver around while adjusting the hinge to ensure everything lines up perfectly. Inserting packaging foam under one side of the frame can help lift.



- d. Tighten the bolts with the open end wrenches provided.



STEP 4 - Install the legs

Legs are shipped fully assembled. Alternative heights in 3" increments can be achieved by removing leg segments.

To install the legs, thread the washer over the bolt of the leg with the recessed side facing the leg, and tighten by hand. **Do not over tighten.**



STEP 5 - Connect head motor cable

Uncoil the Head Motor Cord and plug it into the Power Supply.



STEP 6 - Attach remote control

Plug the wired remote control into the head motor splitter cable.

STEP 7 - Flip the base

Carefully flip the base over on to its legs. Important: Two people are required to move the bed base. Do not drag across the floor. Do not rest frame on its side, excessive pressure may damage the legs.

STEP 8 - Install power cord

Insert the Power Cord into the Power Supply.



STEP 9 - Connect to power

Plug the Power Cord into a power outlet. **A surge protector is recommended.**

STEP 10 - Install mattress retainer bar

Insert each end of the mattress retainer bar into the holes located on the foot section, and lay it down so that it rests on the edge of the base.



Setup is now complete! Quickly test remote functions to verify proper setup and return the base to a flat position before placing the mattress on top.